




CLIMATE CONTROL INSTRUCTION CARD

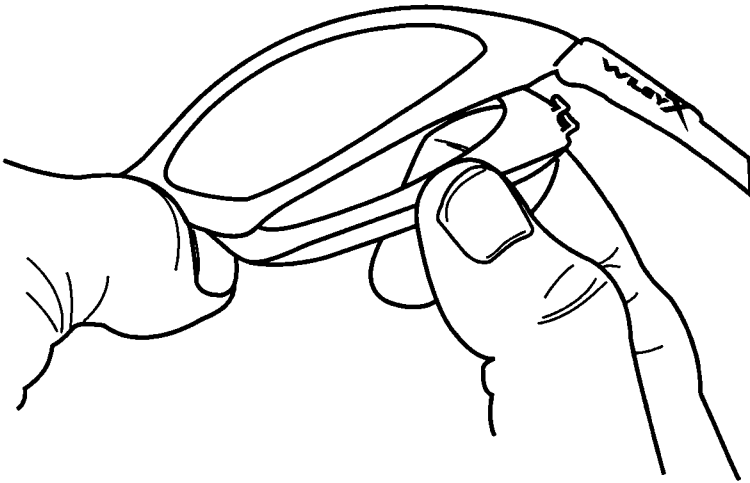

Gasket Replacement for Climate Control™ Series

- 1) Locate hooks on outside of gasket.
- 2) Locate square shaped holes on inside of frame (next to hinge)
- 3) Push hooks into holes on one side of frame. (Make sure gasket is lined up to match nose bridge)
- 4) Repeat on opposite side of frame.

Gasket Removal for Climate Control™ Series

- 1) Grab outside edge of gasket, below the hinge, and pull straight out. Gasket should release.
- 2) Repeat on opposite side.

