



## REMOVING THE CORRECTIVE LENS CARRIER

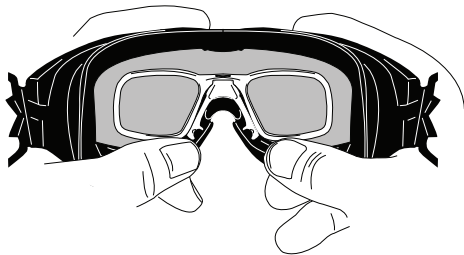

1) Place Hands As Pictured.

2) Yours thumbs will raise the lower edge of the rx frame such that the center portion of the Rx carrier lifts off the post on the nose piece.

## REMOVE / ATTACH GOGGLE STRAP

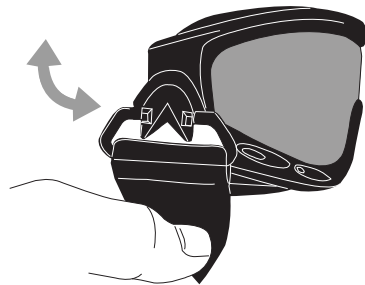

Remove or attach goggle strap by positioning the strap perpendicular to the frame as pictured above.

**MAINTENANCE:** Wiley X lenses are specially coated to offer superior abrasion resistance. Please follow below instructions to prolong the life of your lenses and keep them performing at their best:

- Clean lenses with water only.
- Do not use solvents or special cleaners.
- Use micro-fiber cleaning cloth provided to gently wipe clean.
- Never use paper products to clean and avoid wiping lens surface when dry and/or dirty as this may potentially scratch the lens.

**WARNING:** Wiley X brand eyewear is tested tough. However, impact resistant eyewear is not unbreakable and does not provide unlimited eye protection under all circumstances and conditions. Misused, abused, scratched and/or damaged eyewear can reduce impact protection (and void your limited warranty). Dirty and/or wet eyewear can impair vision and reduce safety (resulting in personal injury and/or property damage). Keep your Wiley X eyewear clean with water only. Do not use solvents or abrasives as it could scratch or damage the product reducing its effectiveness. Store your Wiley X eyewear in the protective case provided to prolong the life of the lenses. Most of all, take all appropriate precautions when wearing your Wiley X eyewear during hazardous and/or dangerous activities and conditions. Wiley X, Inc. is not responsible for personal injury, property damage or losses incurred while using Wiley X brand products.



**WILEYX INC: 1.800.776.7842 // 925.243.9810 // WILEYX.COM**  
7800 PATTERSON PASS ROAD, LIVERMORE CA 94550 USA  
**WILEY X EUROPE LLC: +45 96 93 00 45 // WILEYX.EU**  
SØNDERGADE 8-10 7570 VEMB DENMARK ERX-ICSPEAR




# SPEAR INSTRUCTIONS

**COPYRIGHT © 2015 WILEY X, INC. ALL RIGHTS RESERVED.**


WILEY X, WX, BLACK OPS, logos, tag lines and product names are trademarks or registered trademarks (marcas registradas) of Wiley X, Inc. in the U.S. and other countries. Logos © 2007-2015 Wiley X, Inc. All rights reserved.

## INSERTING GOGGLE LENS

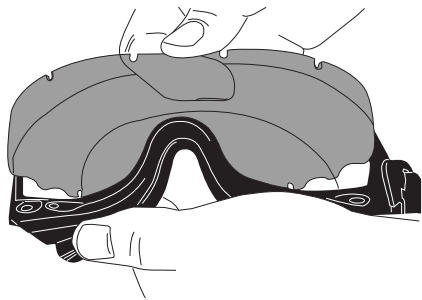


To position the lens into the frame, first seat the lens into the frame at the nose piece, then seat the outer edges. Finish by seating the top of the lens fully into the goggle frame.

## REMOVING GOGGLE LENS

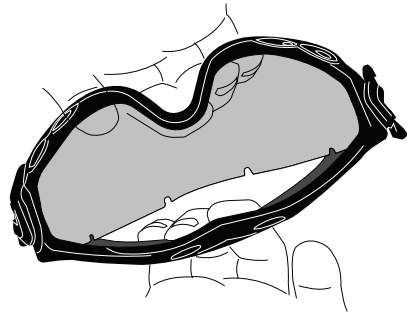

Separate the frame from the top of the lens. Grab exposed lens and pull the lens from the goggle frame.


## GOGGLE GASKET

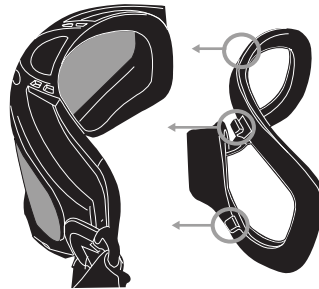

The included removable / replaceable comfort gasket is secured by four hooks, 3 of which are indicated in the graphic above. Utilization of the gasket is especially recommended for individuals requiring corrective [Rx] lenses.

## ATTACHING THE RX ADAPTOR

The Rx Adaptor post is pressed into the goggle frame as shown.

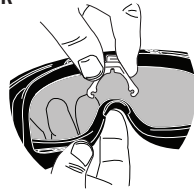

## INSTALLING THE RX CARRIER TO THE RX ADAPTOR

Press the Rx carrier center slot onto the Rx Adaptor post.

